

Finding Your LockNLoad

HOW TO MEASURE FOR A CUSTOM SIZE LOCKNLOAD

Attaching directly to TimberLine Tower							
STEP 1		STEP 2		STEP 3			
Measure: center of Raised Rail (L) to Raised Rail (R)		Measure: center of front roof rack tower to center of back tower		Select Platform Size			
Min	Max	Min	Max	Size			
28.5"	39.75"	27"	33"	к			
34"	45"	27"	39"	в			
45"	56"	28"	54.5"	J			
34"	45"	28"	54.5"	с			
28.5"	39.75"	35"	62.5"	E			
34"	45"	35"	62.5"	Ν			



Attaching directly to SkyLine Tower STEP 1 STEP 2 STEP 3 Measure: center of Measure: center of Select Landing Pad (L) front roof rack tower Platform to Center of to center of back Size Landing Pad (R) tower Min Max Min Max Size 30" 41.25" 27" 33" К 35.5 46.5" 27" 39" в 46.5" 57.5" 28" 54.5" 1 33.5" 46.5" 28" 54.5" С 30" 41.25" 35" 62.5" Е 35.5" 46.5" 35" 62.5" Ν



STEP

Vehicle Roof - Side

View of vehicle roof with existing crossbars.



Vehicle Roof - Side

Attaching directly to Roof Rack Crossbars

STEP 1		STEP 2		STEP 3
Measure: inside of roof rack tower (L) to Inside of roof rack tower (R)		Measure: center of front roof rack tower to center of back tower		Select Platform Size
Min	Max	Min	Max	Size
34"	45.25"	27"	33"	К
39.5"	50.5"	27"	39"	В
50.5"	61.5"	28"	54.5"	J
39.5"	50.5"	28"	54.5"	с
34"	45.25"	35"	62.5"	E
39.5"	50.5"	35"	62.5"	Ν

View of vehicle with fixed points, tracks, or flush siderails.

Measure

Vehicle Roof - Head On

Measure

Landing Pad

SkyLine Tower

Landing Pad

rack

SkyLine Tower

Track