

# **LockNLoad™ RuggedLine®**

to suit Isuzu MU-X Gen2 SUV HEAVY DUTY PLATFORM MOUNTING SYSTEM

# MAXIMUM PRODUCT LOAD RATING: 150 kg



#### **IMPORTANT:**

- LOAD = WEIGHT OF PLATFORM or BARS + MOUNTING SYSTEM + ACCESSORIES + CARGO
- PLEASE REFER TO VEHICLE MANUFACTURER SPECIFICATIONS FOR MAX ROOF LOAD CAPACITY OF VEHICLE. THE LOWEST LOAD RATING APPLIES.
- OFFROAD RATING: SCAN QR CODE FOR LOCKNLOAD LOAD RATING GUIDE.
   REDUCTIONS MAY APPLY.






## FIRST TIME INSTALLATION

- Please read instructions carefully before installation.
- Check the contents of kit. Each spine has the last four digits of the kit's part number lasered in.
   Contact your YAKIMA dealer if any parts appear missing, incorrect or damaged.
- Clean your roof thoroughly prior to fitting the LockNLoad RuggedLine.
- Place these instructions in the vehicle's glove box after installation is complete.




#### **TOOLS REQUIRED:**

- Measuring Tape
- Impact Drill
- 12 mm Socket Wrench
- 13 mm Socket Wrench
- Trim Remover Tool (preferred)
- · Flat Head Screwdriver
- 13 mm Spanner

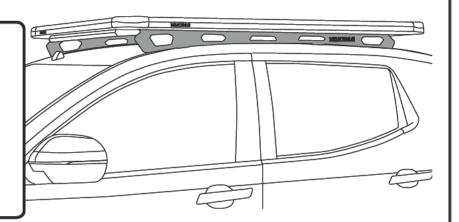


( KIT CONTENTS					
ITEM	COMPONENT	QTY	ITEM	COMPONENT	QTY
1.	MU-X Gen2 SUV Left Spine 2115	x1	7.	M8 Button Head Capscrew 16 mm	x2
2.	MU-X Gen2 SUV Right Spine 2115	x1	8.	M8 Nyloc Nut	х6
3.	Pivot Bracket Assembly	х6	9.	Foam Adhesive 28 x 20 x 3	x10
4.	M8 Socket Head Capscrew 20 mm	x16	10.	Loctite 598 Tube	x1
5.	M8 Spring Washer	x10	11.	4 mm T Handle Ball End Allen Key	x1
6.	M8 Washer	×24	12.	6 mm T Handle Ball End Allen Key	x1

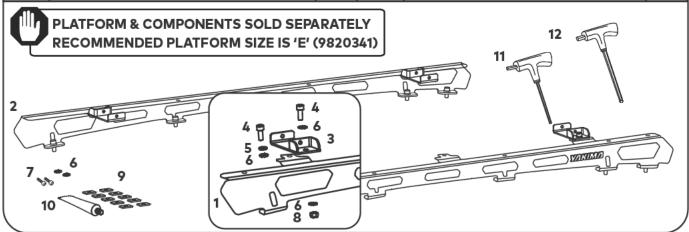

# **REMOVING FACTORY FLUSH ROOF RAILS - MU-X**


UNCLIP PLASTIC RAIL COVERS


Using an appropriate Trim Remover Tool (or tape wrapped Flat Head Screwdriver), wedge the front of the rail covers upwards to release the internal clips.

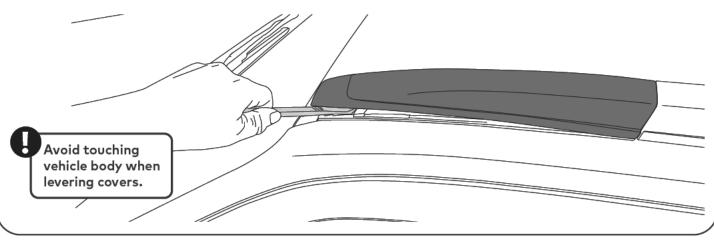


UNCLIP PLASTIC RAIL COVERS


Lift the front of the rail covers up until the back clips disengage.

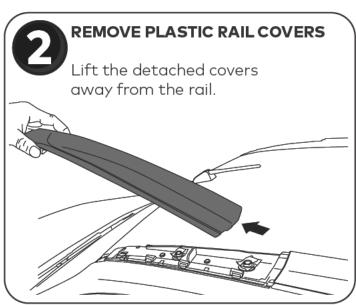

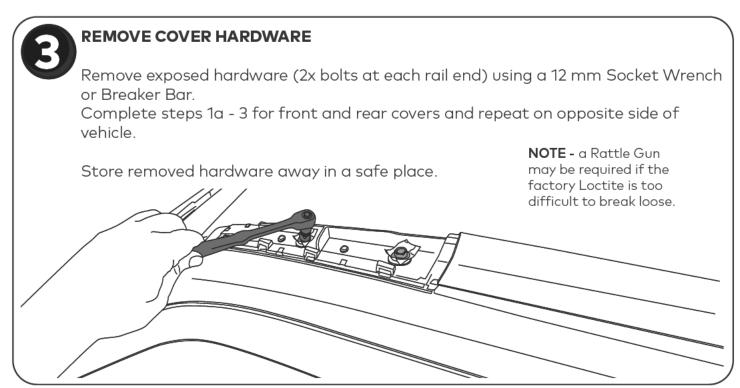

6100012006\_9812115\_Rev6 2/8

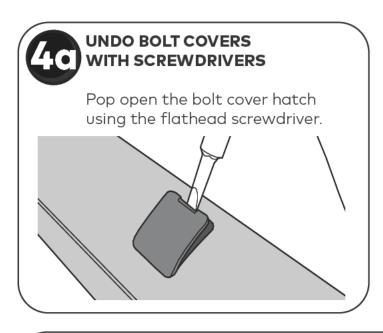


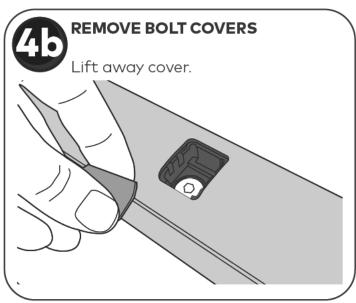




Remove both centre screws with 6 mm bit.


Repeat for both sides.

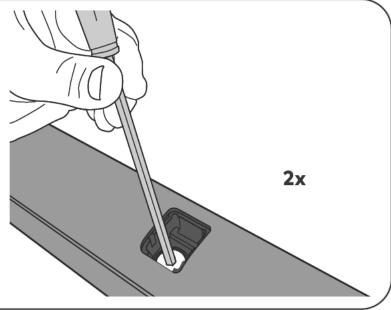

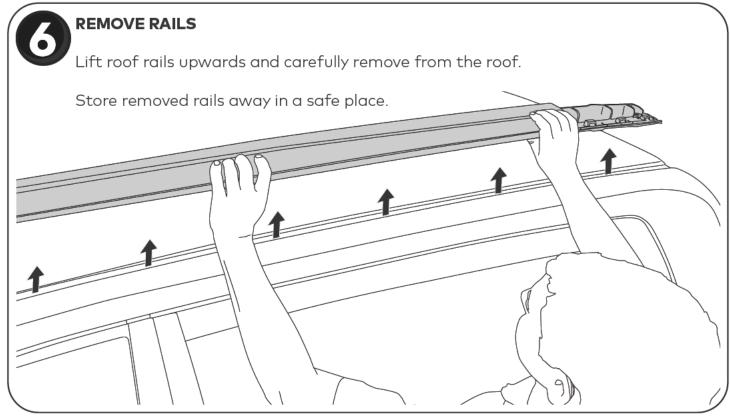


### MOUNTING RUGGEDLINE AND LOCKNLOAD PLATFORM

# FOR STEPS 1-9

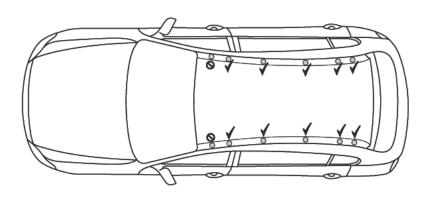


#### **SCRAPE AWAY SEALS**

Using a stanley knife, carefully scrape away the paint seals to expose mounting holes.

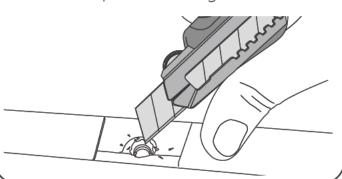


# **AFFIX FOAM ADHESIVE**

Carefully apply Foam Adhesive over the exposed holes in roof channel as marked above, lining up holes in foam with the holes in roof channel. Apply with adhesive side to vehicle.

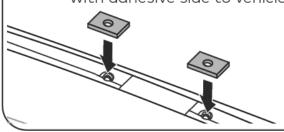


## **APPLY LOCTITE**

Liberally apply the supplied Loctite sealant to the inside surface and on top of each

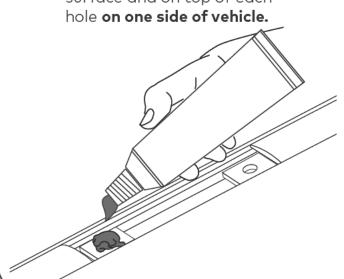



# ASSEMBLE PIVOT BRACKET TO RUGGEDLINE


Assemble Pivot Bracket and M8 hardware as pictured. Complete this for the 2 mounting holes on top of the RuggedLine Spine.

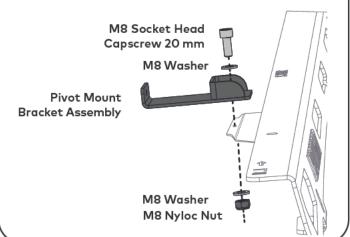


6100012006\_9812115\_Rev6 4/8

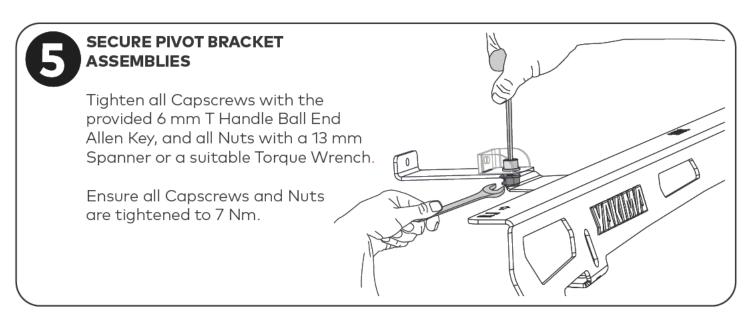

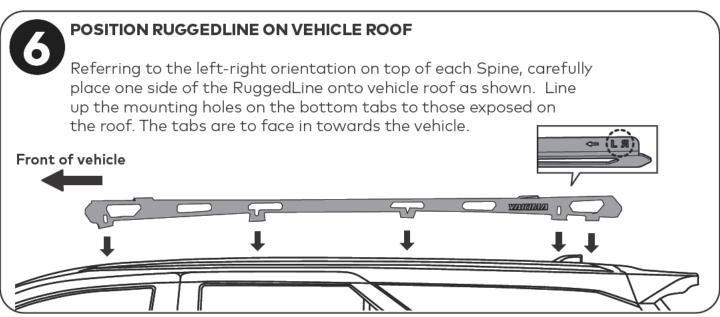

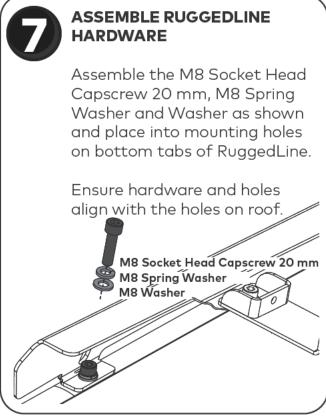

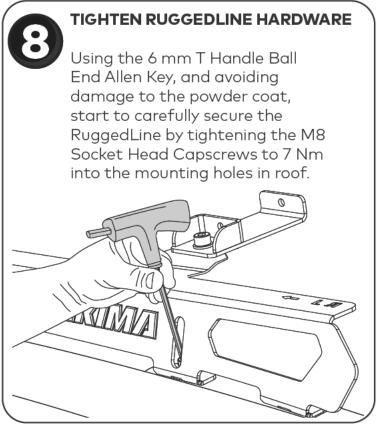




#### REPEAT STEPS TO OPPOSITE SIDE

Repeat steps 1-8 on pages 4 & 5 for securing opposite side of RuggedLine Spine.

Ensure both Spines are securely positioned on vehicle roof. Check each screw is secure before proceeding to install LockNLoad Platform to RuggedLine Spines.

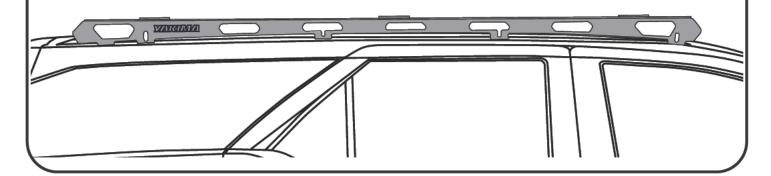




#### PLUG FRONT SOCKET

Using M8 x 16 mm Buttonhead Capscrew, Washer and Loctite sealant, plug front most hole in track.


Repeat on both sides of vehicle.

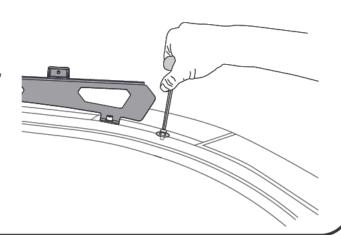



#### **INSTALL PLATFORM PIVOT MOUNTS**

From the LockNLoad Platform kit (sold separately), position Pivot Mounts into each Pivot Bracket Assembly, lining up the rivnut holes on the Mounts with the holes on the brackets.

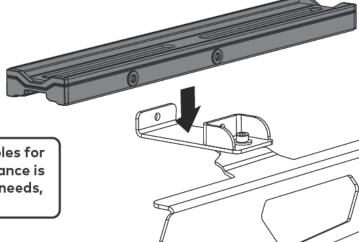



Where possible, always use the centre holes for attaching to Pivot Bracket. If extra clearance is needed due to Platform-to-roof fitment needs, the offset holes can be used.




#### **SECURE PLATFORM PIVOT MOUNTS**

Secure all Platform Pivot Mounts with 2x 16 mm M6 Capscrews with Captive Washer from LockNLoad Platform kit as shown.

Tighten all Capscrews to 4 Nm with the provided 4 mm Ball End Allen Key or a suitable Torque Wrench.


**NOTE -** The Pivot Mount assembly will still have movement after securing which is intended.

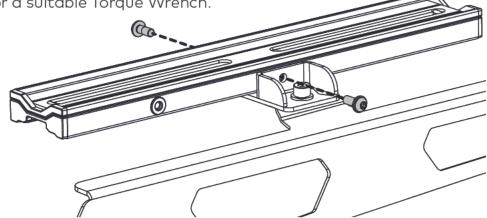



#### **CHECK MEASUREMENTS**

Make sure it is positioned forward in order for rear tail gate to clear platform.

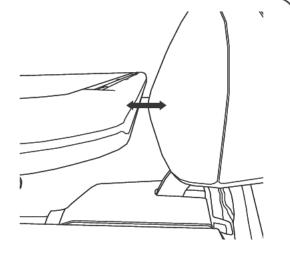

NOW SWITCH TO YOUR LOCKNLOAD PLATFORM INSTRUCTIONS AND CONTINUE FROM THE 'VEHICLE MOUNTING INSTRUCTIONS' PAGE.



www.yakima.com.au www.yakima.co.nz www.yakima.com www.yakima.eu

#### YAKIMA AUSTRALIA PTY LTD

17 Hinkler Court Brendale, QLD 4500 Australia 1800 143 548 yakimaglobal.com

# YAKIMA PRODUCTS, INC.

4101 Kruse Way Lake Oswego, OR 97035-2541 USA 888 925 4621 yakima.com/support

ALL CONTENT SUBJECT TO YAKIMA AUSTRALIA PTY LTD COPYRIGHT @ 2021

6100012006\_9812115\_Rev6 8/8