


**THESE INSTRUCTIONS OVERRIDE THOSE SUPPLIED
WITH THE FITTING KIT AND PLATFORM
UNLESS OTHERWISE STATED**

KIT CONTENTS

ITEM	COMPONENT	QTY
1.	Short Mounting Blocks	x4



**LEG AND PLATFORM
COMPONENTS SOLD SEPARATELY**

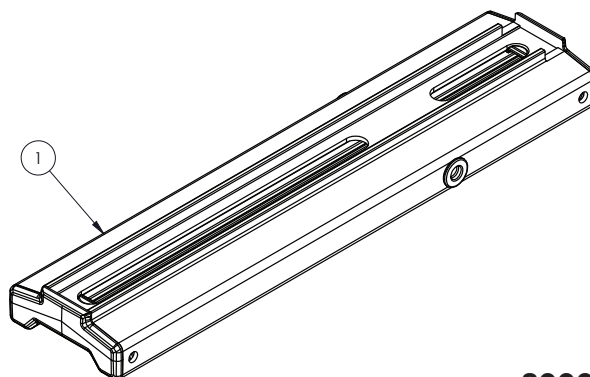

8000371


INSTALLATION

1 REMOVE FIXED POINT HARDWARE

Remove fixed-point covers.


Remove bolts, washers and brackets from the vehicle's fixed points.

Store items away in a safe place.

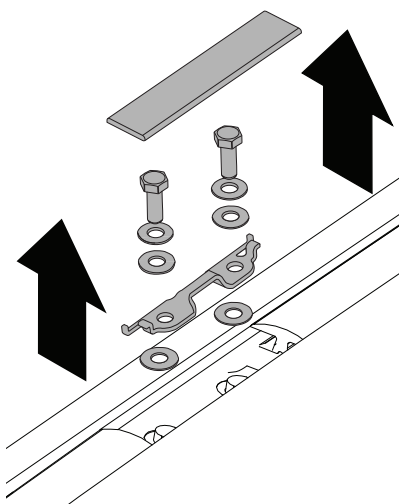

2


Place Foam Adhesive over plastic tubes in the vehicle's fixed points, with adhesive side to vehicle.

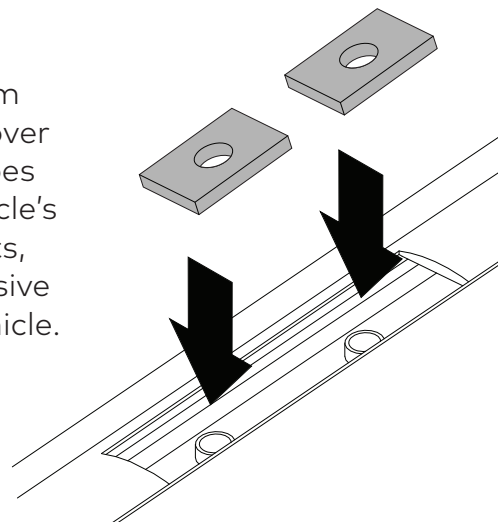


3

PAD POSITIONING


Place Pads over vehicle's fixed points as shown. It is important to put the Pads in the correct position on the vehicle.

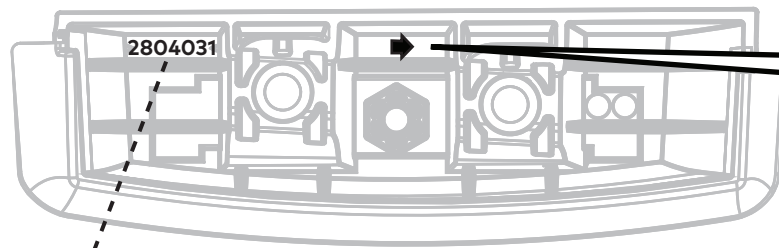

Ensure that the arrows on underside of Pads are facing the front of vehicle

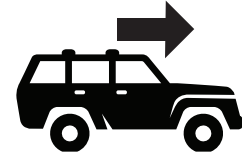

- | | | |
|--------------------|--------------------|--------------------|
| 1 = 2804031 | 2 = 2803081 | 3 = 2804035 |
| 4 = 2804032 | 5 = 2803082 | 6 = 2804036 |

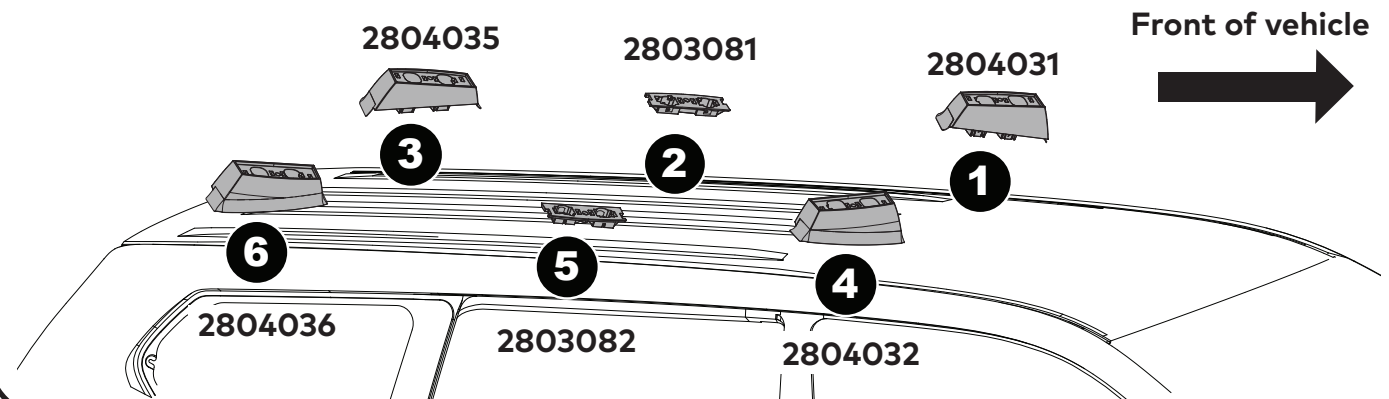


4

SECURE PADS TO FIXED POINTS

Assemble 1 x M8 Washer onto each M8 Hex Bolt (40 mm and 25 mm).

Insert into Pads as per the table.

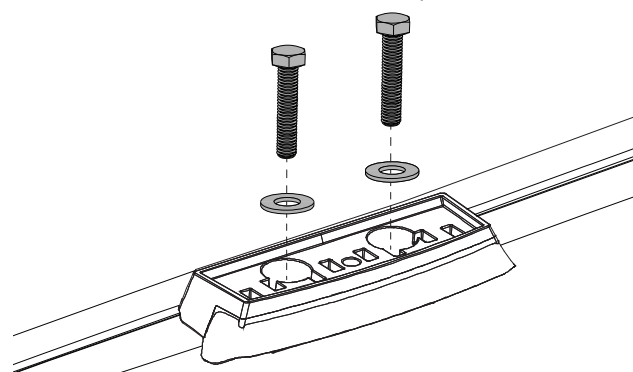


Front and Rear Pads	M8 Hex Bolt 40 mm
Middle Pads	M8 Hex Bolt 25 mm

5

Tighten all M8 Hex Bolts to 7 Nm using 13 mm Socket Wrench.


Check all Bolts are completely tightened down and secure as required.

Do not over tighten.

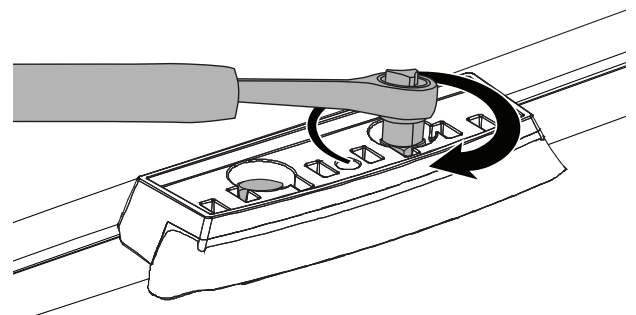


6 REMOVE LEG COVERS

Using the keys supplied in the LockNLoad Leg Kit (sold separately), remove all Leg Covers.

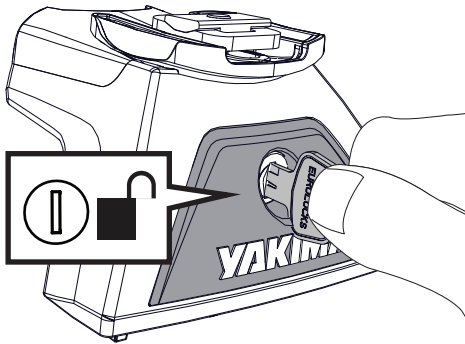

7 DISASSEMBLE LEG ASSEMBLIES

Disassemble Leg components as shown and store in a safe place.


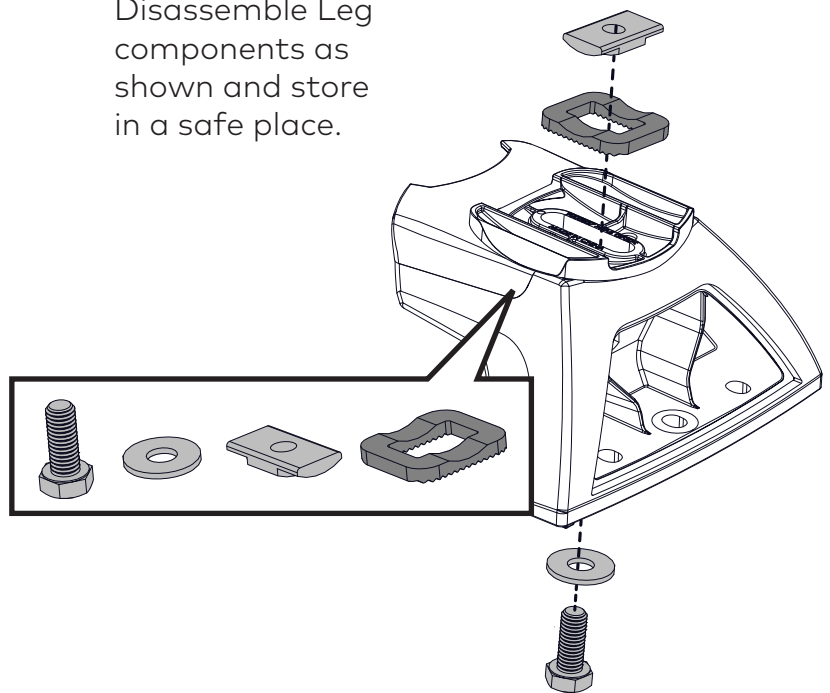


8 ASSEMBLE LEGS

Assemble each Leg as shown using one Platform Mount Bracket, M8 Coach Bolt, M8 Washer and M8 Nut from the LockNLoad Leg Kit.

All Brackets should be parallel with the base of the Leg prior to tightening.

Tighten all M8 nuts to 9 Nm using a 13 mm Spanner.

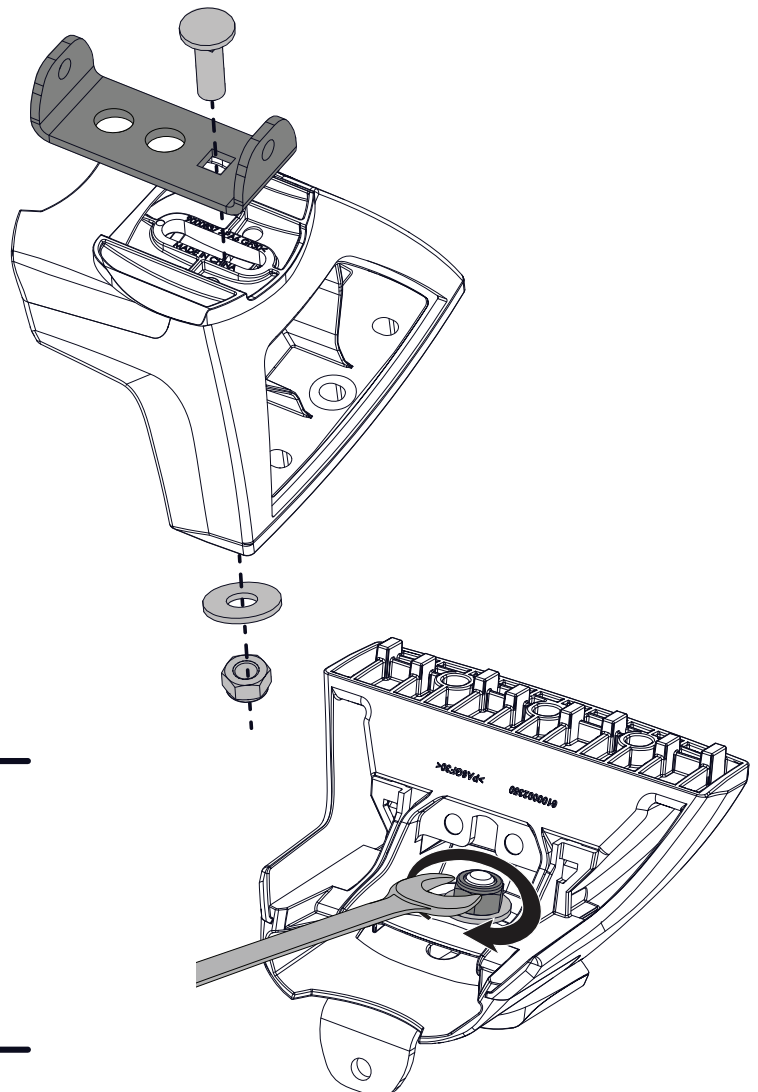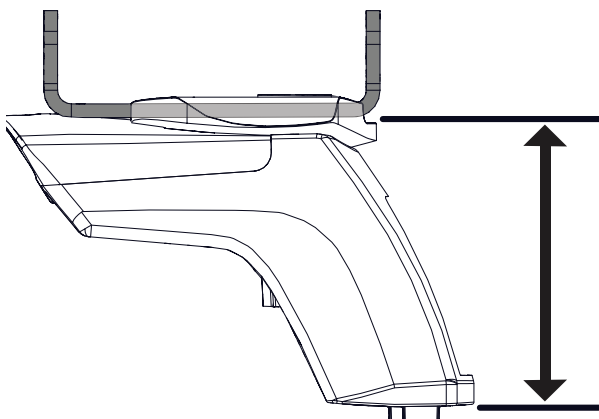


9

ASSEMBLE MOUNTING BLOCKS

Using four (4) **SHORT** Mounting Blocks from **VEHICLE SPECIFIC KIT**, and two (2) **normal** Mounting Blocks from **the Platform kit**, place these top of each Leg assembly.

Secure with two M6 Capscrews 16 mm with Washer as shown.

Tighten all screws to 4 Nm with a 4 mm Ball End Allen Key or a suitable Torque Wrench.

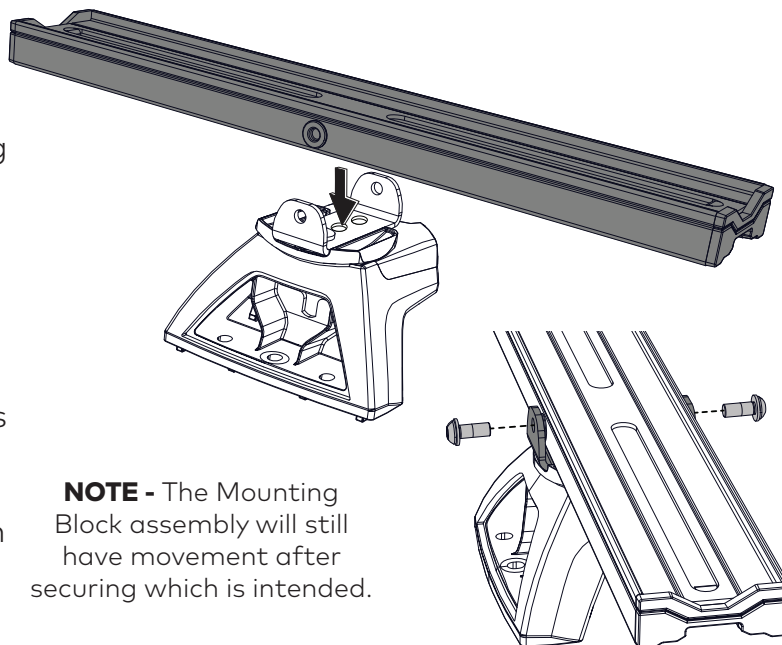


NOTE - The Mounting Block assembly will still have movement after securing which is intended.

10

INSTALL MOUNTING BLOCKS

Place Legs with Mounting Blocks on top of the already installed feet on the vehicle.

Ensure the legs with short Mounting Blocks go to the front and rear of the vehicle. The longer end of the Mounting Block should point towards the centre point of the roof.

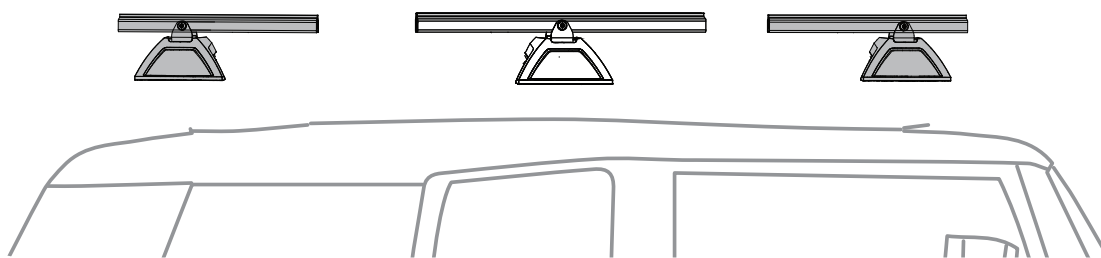


11

SECURE BARS TO PADS

From the LockNLoad Mounting kit, assemble 1 x M6 Washer onto each M6 Set Screw (30 mm and 20 mm) as shown. Insert through centre hole on Leg into Pad as per table.


Front Pads	M6 Set Screw 30 mm
Middle Pads	M6 Set Screw 20 mm
Rear Pads	M6 Set Screw 30 mm

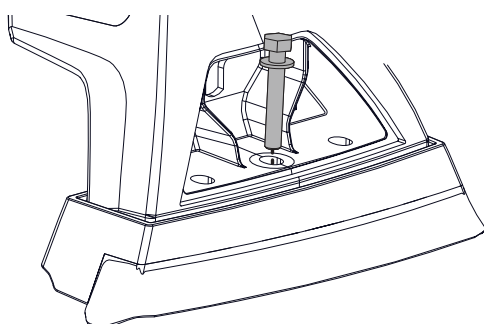

12

Tighten all M6 set screws to 7 Nm using 10 mm Open Ended Spanner.


Do not over tighten.

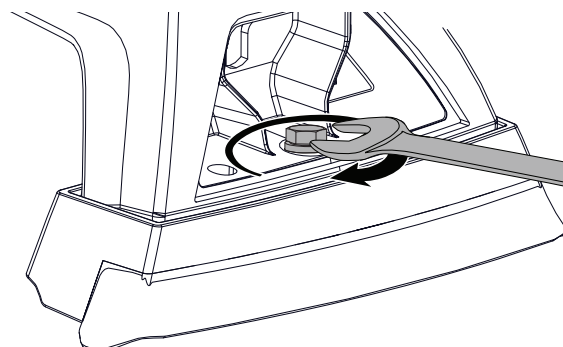

13**LIFT PLATFORM ONTO VEHICLE**

With the help of an assistant, carefully lift assembled Platform up and onto Mounting Blocks on vehicle roof. Centre platform evenly on Legs so there is an equal overhang on sides and ideally on the front and rear.

NOTE - Wind Deflector is to be at the front of the vehicle.

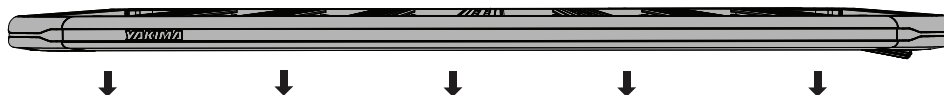**14****INSERT T-BOLTS INTO MOUNTING BLOCKS and FINALISE INSTALL**

Open the instructions that came with your Platform and follow the process starting from Step 3 in the Vehicle Mounting Instructions section (Page 7 for pre-assembled platforms, otherwise page 11 for unassembled platforms).

For the T-Bolts going into the short Mounting Block, these will both attach to the same slat and be forward of the centre of the leg.

YAKIMA

www.yakima.com.au

www.yakima.co.nz

www.yakima.com

www.yakima.eu

YAKIMA AUSTRALIA PTY LTD

17 Hinkler Court
Brendale, QLD 4500
Australia
1800 143 548

YAKIMA PRODUCTS, INC.

4101 Kruse Way
Lake Oswego, OR
97035-2541
USA
888 925 4621

ALL CONTENT SUBJECT TO YAKIMA AUSTRALIA PTY LTD COPYRIGHT © 2017