

Removing/installing the Yakima SkyRise Tent body from the base

We recommend two people to perform this task. No tools required. Approximate time to complete: 15-20 mins


1. Remove the tent from the vehicle and place on the ground. Open the cover and deploy the tent carefully.
2. Remove rainfly and fly hoops – disconnect 5 buckles on each side that connect the rain fly to the tent body. Pull upward on the rain fly hoops and remove the fly and hoops as one piece.
3. Zip up all doors and windows then fold up the tent and stand tent up with the hinge end on the ground. The ends with the window and the door will be facing upward.
4. With one person on each side of the tent, find the anchor strip that holds the tent body to the base. At the corner of each end is a plastic cap with a break in the channel. At the corner, begin to pull upward on the vertical anchor strip.



5. It will begin to create a loop as shown in the photo below. Continue feeding it upward until both sides are free from the frame.



6. Once both vertical ends are free, begin pulling the anchor strip to one side along the horizontal channel. Have the person holding the trailing edge feed it through the plastic corner so the strip does not derail as you pull it through. Pull both anchor strips evenly and gently until tent body is free from the base.

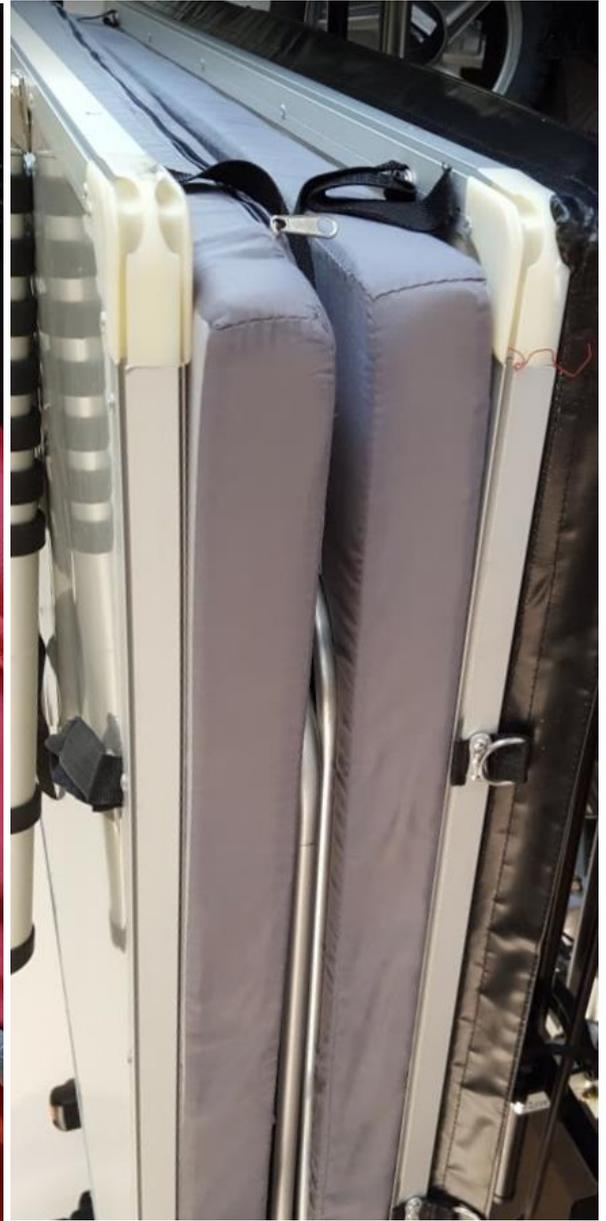

7. To install the tent body on the frame, orient the door and window ends in the correct position. The door should be over the side with the ladder. Find the leading edges of the anchor strip on one side of the tent. Begin feeding the ends into the horizontal channel. Be sure to feed them on the channel closest to the mattress. Feed the anchor strips in evenly and gently through the plastic corner in the frame. It helps if one person pulls and one person feeds to make sure the strip feeds through smoothly without binding.



8. Feed the anchor strip through the channel until you see the webbing straps and buckles for the rainfly at each corner of the tent base. Then begin feeding the ends through the corner cap and into the vertical channel. Feed both ends into the channel evenly and begin to pull downward. Pay attention to the strip as it feeds into the plastic corner cap. Ensure it feeds in evenly and does not pinch. The leading ends of the anchor strip must be pulled all the way to the bottom of the aluminum channel. Ensure the anchor strip is fully seated on all sides before proceeding to next step.

9. Gently open the tent to ensure the tent body is properly installed. Adjust the fabric of the tent so it is evenly taught along the top surface.



10. Reinstall rainfly hoops. First set rainfly on top of tent. Locate end of aluminum rainfly hoops. Install the ends of the hoops in the seats located on the tent.



11. Mate the buckles for the rain fly and the tent body. There are 5 per side, three along the top and one at each corner of the tent frame.



12. Inspect the tent to ensure the fly is properly installed. Ensure your rainfly poles are inside the tent, then close up the tent and reinstall the cover. Your tent is now ready to be reinstalled on the vehicle or stored in a cool dry place awaiting your next adventure.

If you have any questions please call or email Yakima Customer Service

Toll Free: 1-888-925-4621

Email: support@yakima.com